


DRAIN-OVERFLOW SUMP LAYOUT

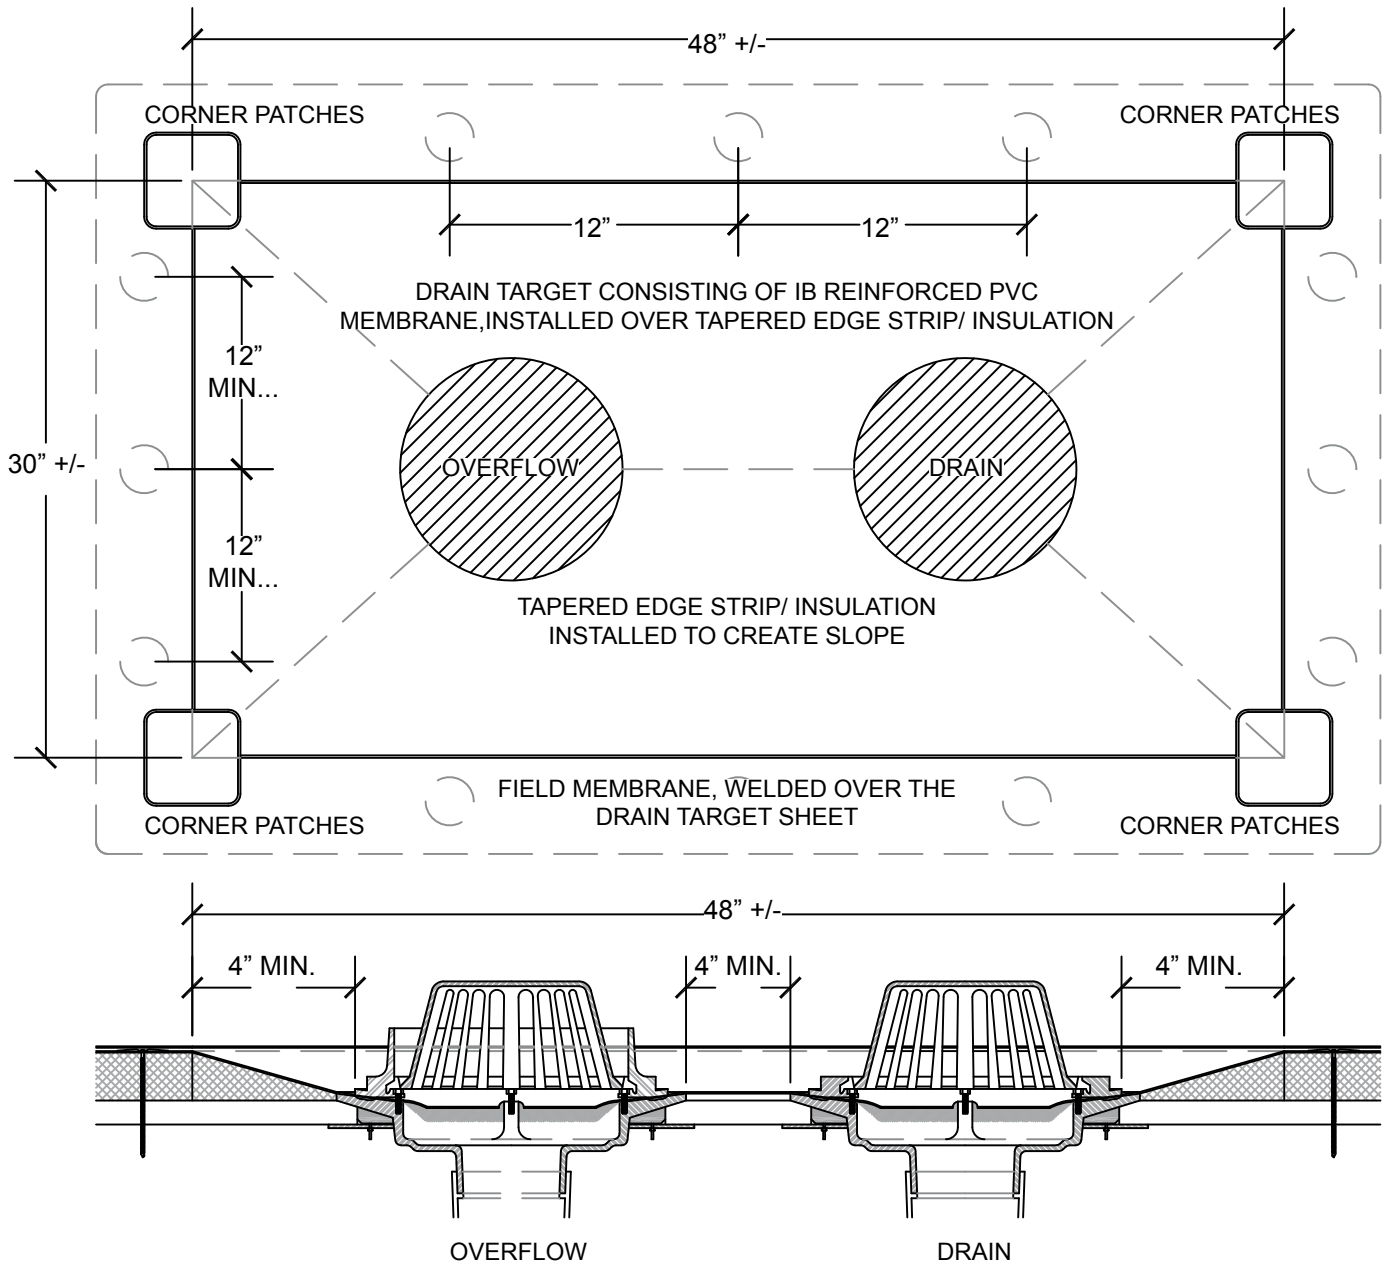

NOTES:

1. THIS DETAIL IS GENERIC IN NATURE AND SHOWS A TAPERED SUMP CREATED BY INSULATION.
2. RE-ROOF AND RE-COVER INSTALLATIONS: ENSURE THAT NO ASPHALTIC RESIDUE (I.E. PLASTIC ROOF CEMENT, STEEP SLOPE ROOFING ASPHALT, WET PATCH, ETC) COMES IN DIRECT CONTACT WITH THE PVC MEMBRANE.
3. RIGID ROOF INSULATION CAN BE SHAVED TO FORM A ROUND TAPERED SUMP FOR BETTER WATER-FLOW TO THE DRAIN RECEPTACLE.
4. ALL OTHER, NON-CLAMPING STYLE ROOF DRAINS AND OVERFLOWS MUST BE PRE-APPROVED BY IB ROOF SYSTEMS BEFORE INSTALLATION.

PROJECT NAME:	TITLE:		
	FD-4 DRAIN-OVERFLOW SUMP LAYOUT		
SCALE: NTS	APPROVED BY:	DRAWN BY: A.SCHWAB	PLOT DATE: 11-08 REV: AS 11-08

** Click here to link to the AutoCAD™ drawing*