


## T-JOINT PATCHES

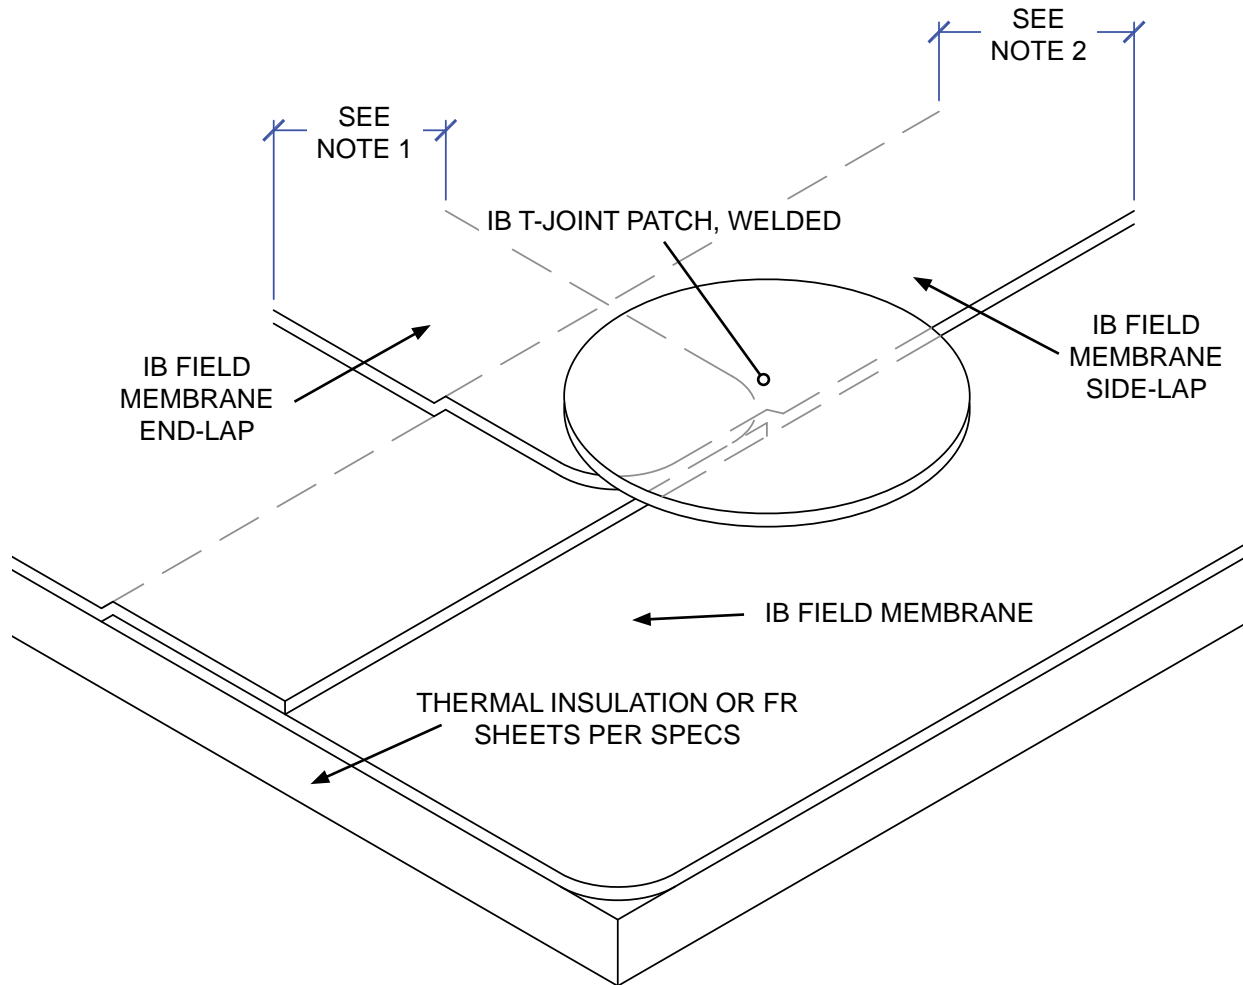

**NOTES:**

1. END LAPS WILL VARY IN WIDTH BETWEEN IB FLEECE BACK MEMBRANES AND NON-FLEECE BACK MEMBRANES. HOWEVER, T-JOINTS PATCH SHALL ALWAYS BE CENTERED AT THE T-JOINTS AS SHOWN.
2. SIDE LAP DIMENSIONS WILL VARY BETWEEN MECHANICALLY ADHERED (MA) AND FULLY ADHERED (FA). SEE LAP TERMINATION DETAILS FOR MORE INFORMATION.

PROJECT NAME:

TITLE:

### MT-1 T-JOINT PATCHES

*\* Click here to link to the AutoCAD™ drawing*

SCALE: NTS

APPROVED BY:

DRAWN BY: A.SCHWAB

PLOT DATE: 11-08  
REV: AS 11-08